

说明书尺寸:75x95mm
材质:105g双铜纸(单色双面印刷),风琴式折页对折

乐果® 乐享·自由·生活
ENJOY FREE LIFE

乐·骑
BLUETOOTH SPEAKER

用户手册



乐果
官方微信公众账号

乐果
微信客服

本手册记载了重要注意事项和产品使用方法,请仔细阅读并妥善保管。

01 重要安全提示

- ◆ 请阅读并遵循本说明。
- ◆ 请在常温环境中存放和使用本产品。
- ◆ 请勿将本产品置于漏水或溅水环境下。
- ◆ 请勿在高温环境下使用本产品,如阳光直射处、散热器、明火或类似环境。
- ◆ 请勿丢掷,避免因跌落造成本产品损坏。
- ◆ 请使用音箱额定电压的电源充电器充电。
- ◆ 如果连接线与您设备不匹配,请与销售商联系。
- ◆ 请将音量调至合适音量,避免对您的听力造成损害。
- ◆ 无论设备因何原因损坏,都必须及时请专业维修人员修理,擅自拆卸将使保修失效。

- CCC 3C认证(国家强制性产品认证)
- 仅适用于非热带气候条件下安全使用
- 仅适用于海拔2000m以下地区安全使用
- 电子信息产品回收利用标志
- WEEE废弃电子电器产品回收标志(不适合与生活垃圾混合倾倒)

02 产品特性

- 支持蓝牙连接音乐播放及双向通话功能。
- 支持蓝牙自动回连功能。
- 支持TF卡APE、FLAC无损音乐格式播放。
- 支持TF卡MP3、WMA、WAV音乐格式播放。
- 支持TF读卡器功能。
- 支持TF卡断电记忆功能,关机记忆到曲,切换模式记忆到秒。
- 如果10分钟后没有音乐播放或连接,音箱将自动关机以节省电量。
- 支持AUX功能(需用本产品标配的AUX音频线)。
- 支持复位功能。
- 可手动关闭语音提示。

03 产品附件




音箱主机x1

便携挂绳x1

使用指南x1

04 按键功能

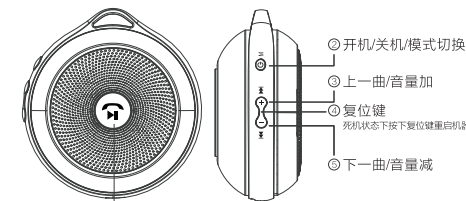

○ 暂停/播放/接听/挂断/语音提示开关
触摸键指示灯

暂停/播放/接听/挂断/语音提示开关:
播放音乐时轻触暂停、播放;
来电时轻触接听,通话时轻触挂断;
开机后尚未连接蓝牙时,长按2秒
关闭/开启语音提示


开机/关机/模式切换:
长按:2秒开/关机,默认进入蓝牙模式
短按:蓝牙模式——TF卡模式
(需插入TF卡)——AUX模式
(接入AUX音频线连接电脑)依次切换

上一曲/音量加:
短按上一曲,长按音量加

下一曲/音量减:
短按下一曲,长按音量减

触摸键指示灯:
开机:蓝灯长亮;
蓝牙模式:蓝灯闪烁,等待蓝牙配对。
连接成功后蓝灯保持长亮约2秒左右
后再次闪烁。
播放状态:蓝灯长亮
暂停状态:蓝灯闪烁
音量调节:蓝灯快闪,调到最大或最小
音量时,蓝灯停止闪烁并保持长亮提示。
复位键:
死机状态下按下复位键重启机器

05 接口功能

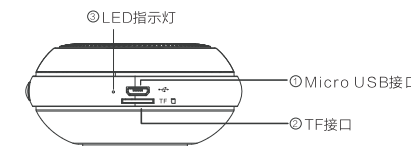


Micro USB接口:
数据传输:关机状态下,音箱内已插入TF卡,数据线连接电脑。
在电脑上打开新硬件即可拷贝音乐文件存入TF卡。
电源充电:连接DC5V~500mA的USB电源适配器,或安卓手机
充电器,或电脑USB端口充电。
AUX音频:开机状态下,AUX音频线连接电脑即可播放电脑里的音乐。

TF接口:
音箱开机状态下插入含有音乐文件的TF卡,音箱即自动播放TF卡
内的音乐文件。(如有需要可短按M键切换至其它模式)

LED指示灯:
充电时红灯长亮,充满后即熄灭。

06 蓝牙连接

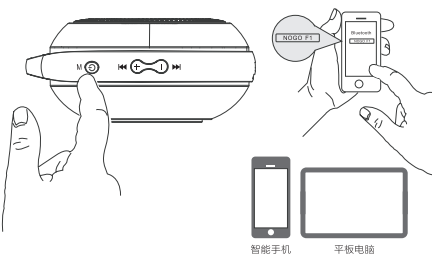


将音箱与具有蓝牙功能的平板电脑或智能手机配对
长按电源键开机,蓝灯点亮,默认进入蓝牙模式,等待蓝牙配对。
在您的设备上找到“设置”,打开蓝牙,搜索设备。点击蓝牙设备
列表中已搜索到的NOGO F1,开始连接。连接成功,您将听到
提示音。成功连接后,在蓝牙设备上开始播放音乐。
蓝牙连接有效距离10M,具体因环境而异。音乐传输可能因设备
与音箱之间的障碍物而中断,如墙、设备的金属外壳或附近有相
同频率工作的其它设备。

- 注意事项:**
- 1.如有必要,请输入密码“0000”。
 - 2.蓝牙音箱处于开启状态时会自动回连关机前的最后一个连接设备,无需重新搜索配对蓝牙。
 - 3.如需连接其它蓝牙设备,长按约4秒钟即可切断与当前设备连接,
蓝灯闪烁,蓝牙返回等待连接状态。

07 规格参数

型号	F1
扬声器单元	1.5英寸全频扬声器+悬浮连体式被动辐射器
额定功率	2.5W
额定阻抗	4Ω
蓝牙版本	4.0+EDR
播放模式	蓝牙模式/外置音频输入模式/TF卡模式
存储类型	支持最大容量不超过32G TF卡
音乐格式	APE、FLAC、MP3、WMA、WAV
电源供应	600mAh内置充电式锂聚合物电池
充电输入	DC5V 1A (Micro USB)
包装尺寸	163mm x 135mm x 66mm
产品体积	83mm x 78mm x 38mm
产品重量	净重193g,毛重约342g
商品条码	694404491045 8
外观专利	201330509296.6

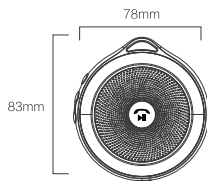

08 常见故障处理方法

问题	解决方法
蓝牙模式下声音断续	确保主机与蓝牙设备的连接距离在10米以内;请保证主机 与蓝牙设备之间没有障碍物阻隔,或者尝试更换另一个蓝 牙设备进行播放
音频输入模式无声音	请检查音频连接线是否正确连接到位 请检查电脑主机声卡运行是否正常,或是否正确连接到相应 的音频输出接口
TF卡模式无声音/格式错误	请检查TF卡的格式是否FAT32 请检查TF卡内文件是否是APE、FLAC、MP3、WMA、WAV
按键无反应	先关机充电30分钟再开机,或按下复位键复位后重新开机
扬声器无声音	尝试调大音量 请选择正确的音频输入通道 请确保所有的线缆均正确连接
扬声器有杂音	请确保所有线缆都已正确连接 或尝试更换其它音频线缆 请确保音频线外接的设备端输出本身没有杂音
不充电	请确保Micro USB充电线与适配器和主机正确连接 请检查电源适配器的电压和电流是否满足需求 请确保Micro USB充电线与其它设备能正常充电
蓝牙配对不成功	检查设备是否处于配对状态(蓝牙模式下) 或尝试重新开机后再次进行蓝牙配对

产品服务条例

- 产品保修规定**
- 1.乐果数码移动音箱执行国家三包规定。
 - 2.用户在按照产品使用手册正常操作的状态下,若出现因厂方原因造成的
质量问题,请向产品经销商出示保修卡及购机发票提供维修服务。
 - 3.产品质量问题不包括用户个人对产品品质表现的主观性异议。
 - 4.购买日期以购机凭证日期为准。不能提供有效证明的,购买日期以生产
日期为准。
 - 5.产品附件、消耗品及选购件(如锂电池、连线、充电器、外壳、印刷品等)
均不在保修范围之内;
 - 6.除法律有不同规定,因本产品故障引起的附带性损失,我司不予以补
偿。
 - 7.出现以下状况不提供免费维修服务
7.1未出示有效保修卡及购机发票的情况的(但能保证本产品在三包有
有效期内的除外)
 - 7.2未按产品使用说明的要求使用、维护、保管而造成损坏的;
 - 7.3购买后发生的,因摔落、进水、不当存放等造成损坏的;
 - 7.4在非乐果授权认定的维修机构进行修理、改造、分解、清洁而造成损
坏的;
 - 7.5因使用乐果推荐之附件或消耗品(锂电池、充电器、连线、适配器等)
而引起的损坏的;
 - 7.6由于天灾等人为不可抗拒之自然灾害,异常电压等外部因素造成的
故障;
 - 8.请妥善保存保修卡,保修卡遗失不补发。

- 产品技术支持**
- 1.热线电话:我们为用户提供售前、售中、售后全营销链的服务与支持,如
需要查询任何产品信息(操作方法、规格说明、维修方式及授权维修代理
店等),请与乐果热线中心联系。乐果热线中心联系电话:400-606-9918
 - 2.官方主页: <http://www.nogoav.com>
 - 3.官方邮箱: info@nogoav.com

产品保修卡

用户姓名: _____ 联系电话: _____
 用户地址: _____
 产品型号: _____ 产品序列号: _____
 购机日期: _____
 售机单位: _____
 联系电话: _____
 售机单位地址: _____

 邮 编: _____
 售机单位签章: _____
 维修单位: _____ 联系电话: _____
 地 址: _____ 邮 编: _____
 送修故障: _____

 修理结果: _____

 日 期: _____ 经手人: _____
 送修故障: _____

 修理结果: _____

 日 期: _____ 经手人: _____

乐果® 乐享·自由·生活
ENJOY FREE LIFE

乐·骑
BT BLUETOOTH SPEAKER



01 CAUTION

! CAUTION

- ◆ Please study and obey this manual
- ◆ Please store and use the product at room temperature
- ◆ Do not place the product under dripping or splashing water environment
- ◆ Keep the speaker away from high temperature, not allowed roasting, baking or drying
- ◆ Do not throw or drop it, avoid destroying
- ◆ Please use the right adaptor to recharge it
- ◆ If any problems of the cable, please contact with the agent
- ◆ In order to protect your ear, please adjust the volume to a suitable level
- ◆ Don't open and repair the speaker by yourself
- ◆ This product is made of high quality recyclable materials and components, do not throw away this product with other household rubbish
- ◆ In order to protect the environment, please discard correct classification



-2-

02 FEATURES


- Bluetooth play and hand-free
- Connect back automatically
- TF card plug & play:MP3/WMA/WAV/APE/FLAC
- Breakpoint memory: back to the second when change the mode while back to the song when turn it off and on
- Data transfer & AUX play
- It will enter into energy-saving situation in 10 minutes if no any task
- Reset by one key
- Voice guide can be closed

03 ACCESSORIES



-3-


04 BUTTONS FUNCTION

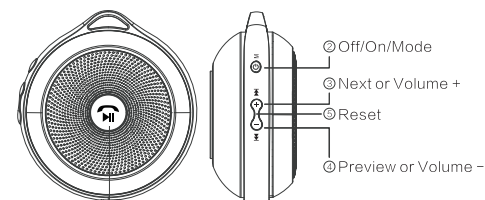

- ⓪ Pause/Play/Answer or Hang-up the phone/Close the voice guide
LED Indicator
- ⓪ Pause/Play/Answer or Hang-up the phone/Close the voice guide:
When play music, press it to pause/play
Press it to answer the phone when call come in while hang it up during talking
Turn it on before connecting the Bluetooth; hold it on for 2 seconds to open/close the voice guide
- ⓪ Led Indicator:
Turn on the speaker: Blue light
Bluetooth mode and waiting for connecting: Blue light twinkle
Playing: Blue light
Pause: Blue light twinkle
Adjust the volume: during operating, blue light twinkle and stop twinkle when MIN or MAX volume
- ⓪ Off/On/Mode:
Press for 2 seconds to turn it on/off, Bluetooth mode default
Press it again and again to change mode among Bluetooth/TF card/AUX
Remark: TF card or AUX cable should be inserted into the speaker before change the mode
- ⓪ Preview or Volume -: Press it to play last music file, hold on it to decrease the volume
- ⓪ Next or Volume +: Press it to play next music file, hold on it to increase the volume
- ⓪ Reset: when the speaker frozen, please press it to restart this speaker

-4-


05 INTERFACE FUNCTION

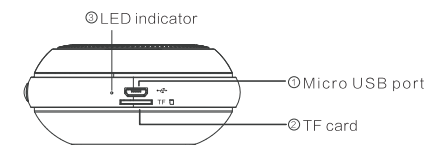

- ⓪ Micro USB port:
Transfer data (music files) from the computer to the TF card in speaker
Recharge the battery: DC5V-500mA adaptor or PC USB port to recharge
AUX port: work just fine with any iPod, cellphone or PC
- ⓪ TF card (Micro SD card) port:
TF card plug & play, support MP3/WMA/WAV/APE/FLAC format music file
Press ⓪ key to change the mode among Bluetooth/TF card/AUX
- ⓪ LED indicator:
During recharging, Red indicator; when recharging finished, indicator off

-5-

06 BT CONNECTING

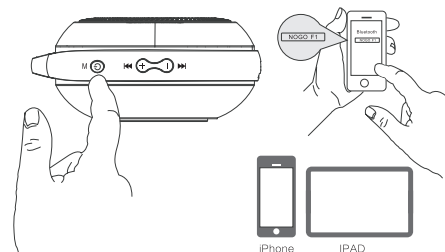


To pair this speaker with the other device that has Bluetooth function

- Hold on ⓪ to turn on the speaker, indicator open, default Bluetooth mode and waiting for connecting
 - Find this speaker (NOGO F1) on your hand Bluetooth device and click it to connect
 - One warning tone comes with connecting successfully. Then you can play the music on your Bluetooth device
- Remark: Bluetooth working distance is 10meters. If there is barrier or similar sequence device, maybe the connecting will be broken
1. If necessary, password: 0000
 2. Turn on this speaker, it will connect back to the last connected Bluetooth device automatically
 3. To be disconnected by hold on ⓪ for 4 seconds. When disconnected, the Bluetooth will twinkle and waiting for a new connecting

-6-

07 SPECIFICATION

Model No.	F1
Speaker Unit	1.5" speaker+subwoofer
Power	2.5W
Impedance	4Ω
Bluetooth	4.0+EDR
Play Mode	Bluetooth/TF card/AUX
Memory Type	≤ 32GB TF card
Music Format	APE、FLAC、MP3、WMA、WAV
Capacity	Built-in 600mAh lion battery
Input	DC5V,1A (Micro USB port)
Gift Box Size	163mm x 135mm x 66mm
Speaker Size	83mm x 78mm x 38mm
Speaker W.	N.W.:193g G.W.:342g
ID Patent	201330509296.6

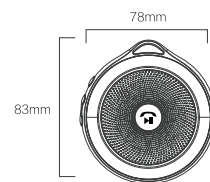

-7-

08 TROUBLESHOOTING

TROUBLES	ANSWER
Music Brokenly	Make sure the connecting distance ≤ 10m Make sure there is no barrier between two Bluetooth device Change another Bluetooth device to play the music
No Sound Under AUX	Make sure the cable connected well Make sure change the mode to AUX by press "M" key
No Sound Under TF Card	Make sure the TF card format is FAT32 Make sure the music file format is APE、FLAC、MP3、WMA、WAV
Button No Function	Turn off the speaker and turn it on in 30 minutes Reset the speaker by pressing RESET key
No Sound	Increase the volume Make sure all connecting ok Make sure the mode is matched
Noise	Check the cables connecting Try different connecting cable Make sure the music source without noise
Recharge Failed	Make sure the USB cable connected well Make sure the adaptor can work Make sure the USB cable can work
Bluetooth Pair Failed	Make sure the speaker is waiting for connecting Restart the speaker and try again

-8-

备忘录

